


Bullet DCX Adapter ring


INSTALL GUIDE

#1

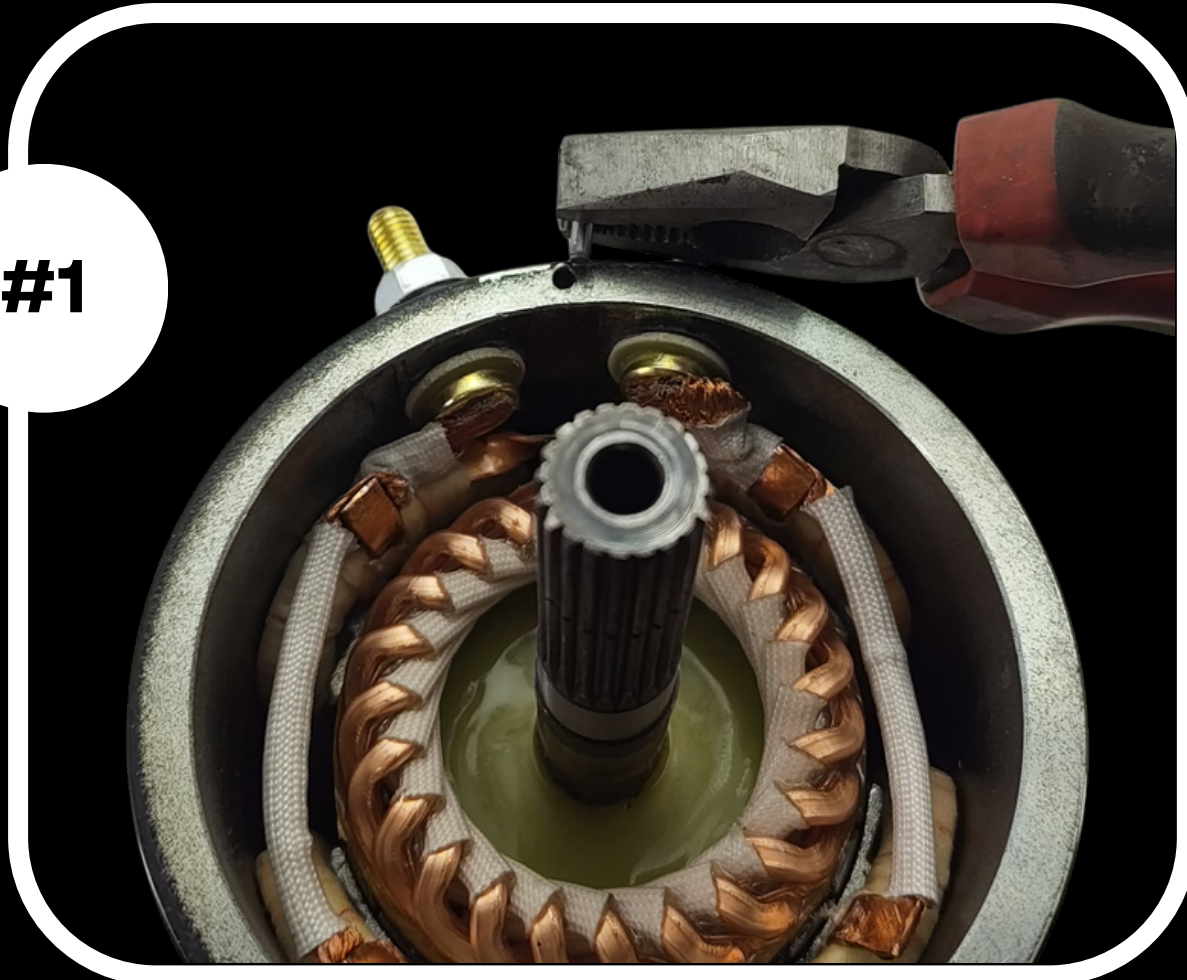

remove short dowel.

#2

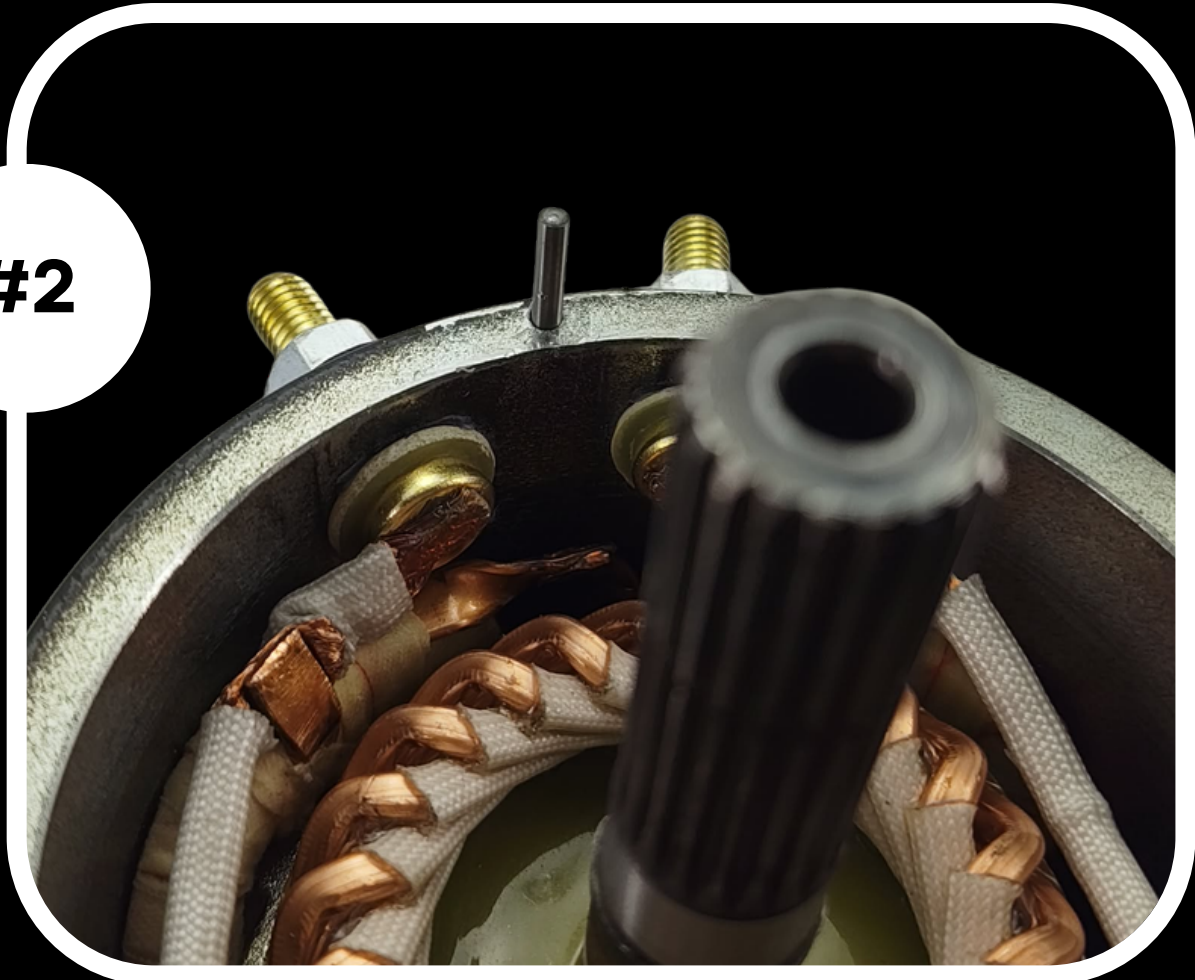


install new longer dowel.

#3



Install stainless washer
under bearing.

#4

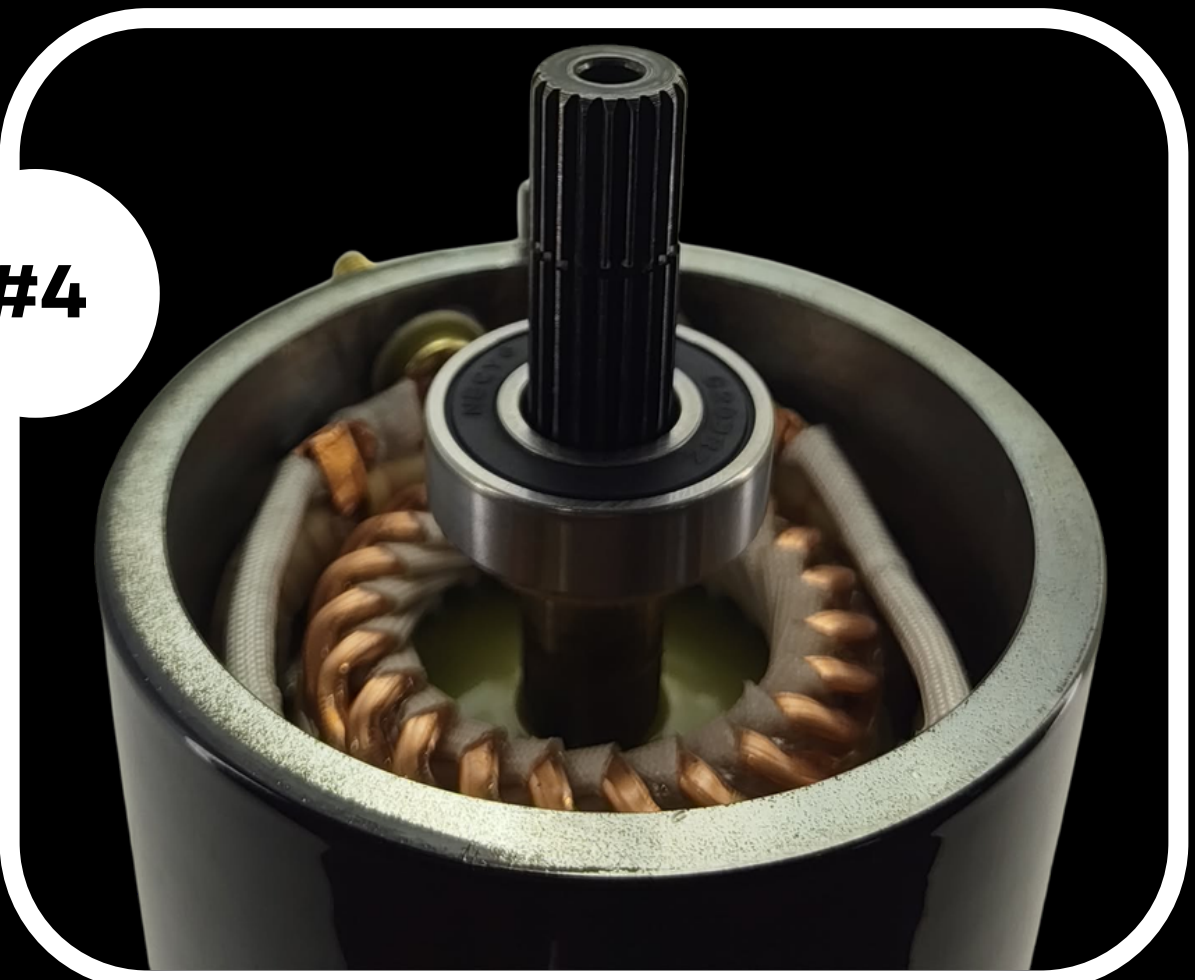

install bearing.

#5



install spacer ring.

#6



install motor to
winch.