


# CONNECTIONS FOR 12V DC POWERED ELECTRIC WINCH.

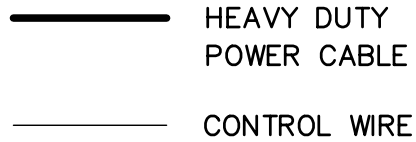

## IMPORTANT NOTES.

- 1/. CONTROL WIRES FEEDING CONTACTOR COILS MUST BE CONNECTED AS CLOSE TO BATTERY MAIN TERMINALS AS POSSIBLE.
- 2/. NEVER CONNECT CONTROL WIRES TO VEHICLE CHASSIS GROUND.
- 3/. NEVER CONNECT CONTROL WIRES TO CONTACTOR +VE MAIN TERMINAL OR TO MOTOR NEGATIVE (GROUND) TERMINAL.

