

Fitting Instructions


Vehicle: Mitsubishi Pajero
Year model: 2008 - 2013
Product: Auxiliary battery tray
Product Code: 026

Details:

Fits up to N70zz 12 inch case battery.
Comes with: 2 x 6mm nuts & washers, 1 x 4mm bolt, and 1 x 4mm bolt & nut, 1 x hold down with J hooks.

1. Battery tray fits into the rear of the left hand passenger side of the vehicle under the bonnet.

3. The tray also has a support bracket that bolts to the firewall using existing bolt in firewall. Fix the bracket to the tray using 4mm bolt & nut.

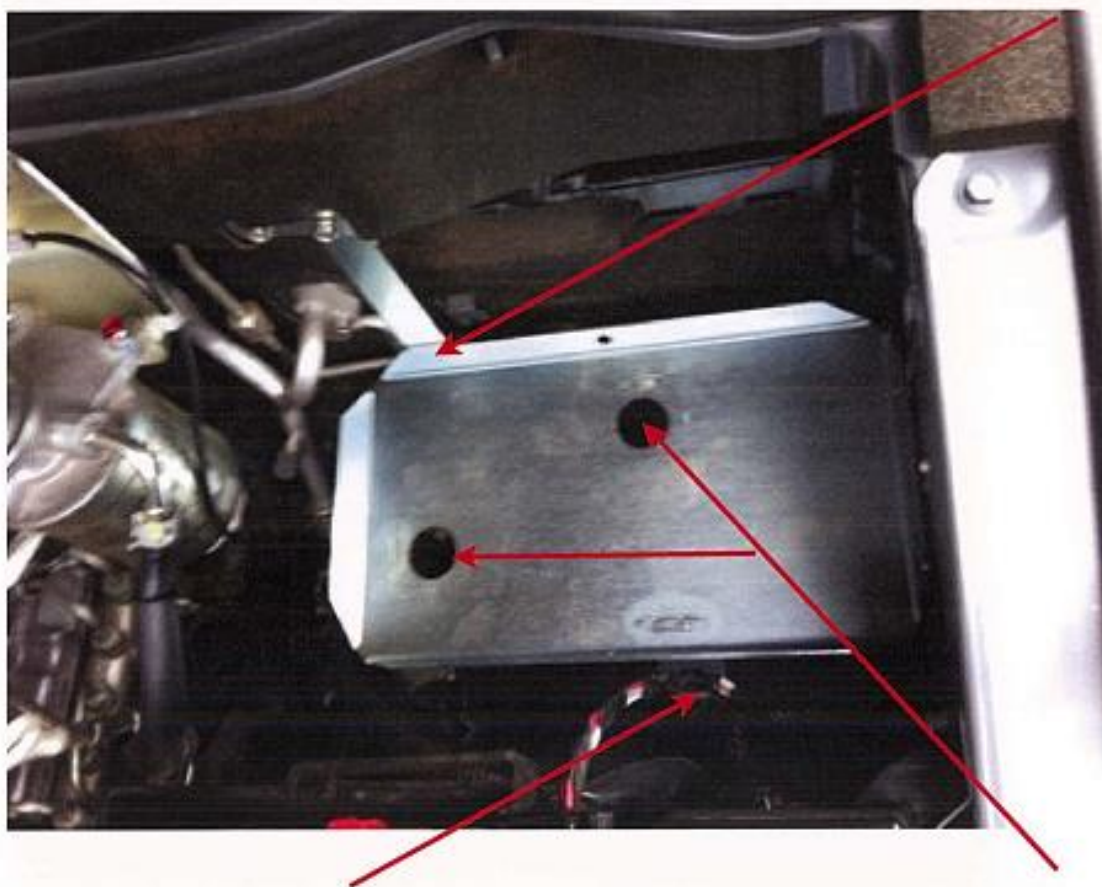

2. Sit battery tray into position the support leg to the front of the vehicle requires a 4mm bolt.

4. The two holes in the base of the tray have support legs which sit over two threaded bolts which are in the skirt. Fit 2 x 6mm nuts & washers on to these threads and tighten all nuts & bolts.

5. Sit battery in tray, fit battery hold down and tighten.