

VEHICLE Suzuki Jimny JB74
PRODUCT Battery Tray
PRODUCT CODE BT110-Black

1. Place the main tray and pre-fit the hose clamp to the A/C hose. **See Figure 1**

2. Fit the main battery tray to the panel using 2 sets of M6 bolt & nuts. **See Figure 2,3**

3. Fit the corner support bracket to the engine bay corner and the main tray, using 4 sets of M6 bolt & nuts. Remove loom and washer hose can help with fitting. **See Figure 4**

4. Check the clearance with the brake hoses and cables, then tighten all fasteners.

5. Place the battery, use the tie down and 2 clamp rods & 2 M8 nuts to secure the battery. **See Figure 5**

*Note: mounting slots for ROADPOWER 100A fuse box on the tie-down bracket, fasteners not included. Fit the fuse box before placing the tie-down bracket if needed. **See Figure 6***

6. Fit the DCDC bracket to the tie down bracket and panel, using 4 M6 bolts and clinch nuts stick. **See Figure 7,8**

*Note: mounting slots for Redarc BCDC1240/1225 charger on this bracket, fasteners not included. **See Figure 9***



Figure 1

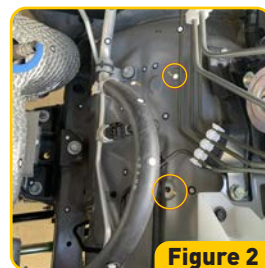


Figure 2

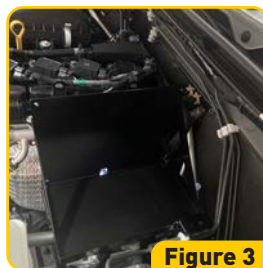


Figure 3



Figure 4



Figure 5



Figure 6

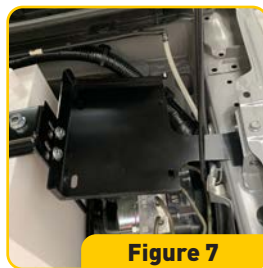


Figure 7

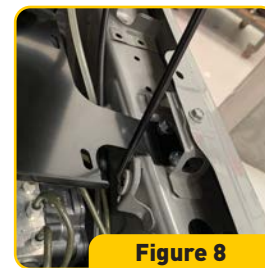


Figure 8



Figure 9

Hardware		QTY
HOSE CLAMP	32mm P CLAMP SS rubber lined	2
BTXX_ROD	Battery strap Threaded Rod 220mm	2
M6 BOLT	M6 x P1.0 RH L20 HEX	11
M6 SPRING WASHER		11
M6 WASHER	Ø12 Ø6.4 1.5T	17
M6 NUT	M6XP1.0 RH NUTS	9
M8 NUT	M8X1.25 FLANGE NUT	2