

FITTING INSTRUCTIONS


VEHICLE	Nissan Navara NP300
PRODUCT	Rear Locker Guard
PN#	SB065
NOTE	Ensure Vehicle is on level ground Chock front wheels to avoid vehicle rolling

PAGE 1

1. Remove the bolt holding the handbrake cable and (2) diff centre bolts.
See figure 1 & 2

2. Fit Blackhawk locker guard to vehicle.
Ensure handbrake cable retaining bracket is on top of locker guard
See figure 2

3. Fit all bolts and tighten

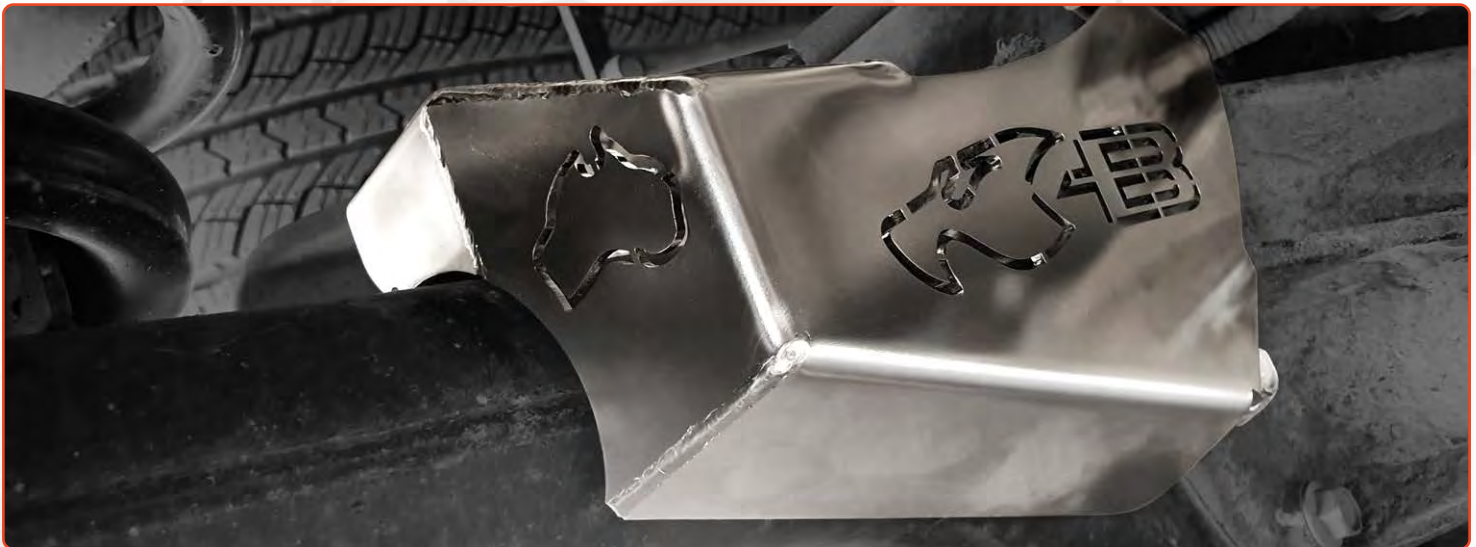

TOOLS REQUIRED TO COMPLETE FITMENT

- 12mm and 14mm socket

