

**XMP**

# Rapid Precision Valve

Patent Pending


O-ring and seal may be flipped to gain an extra .100" tab clearance.

TPMS mount may be omitted. Always use two nuts, VS-950 interface.

.500" Min. wheel clearance  
From tab to valve seat.



**2) Torque nut to 25-45 Inch-lbs.**

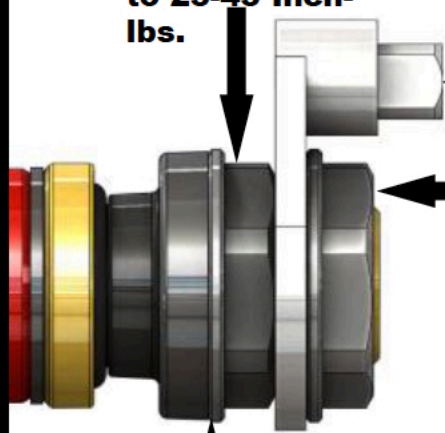

**4) Torque T10 screw to TPMS mount at 12 inch-lbs.**

**3) Torque nut to 25-45 inch-lbs  
Use blue or red Loctite on outer nut.**

**1) Lightly oil here.**

For more detailed instructions and information.

